



MORE INFORMATION

For care and cleaning instructions, refer to the Tropitone® Care, Maintenance, Safety & Warranty Information guide included with your furniture and available at www.tropitone.com/warranty.

Additional care information, “How To” videos and assembly instructions for Tropitone Outdoor Furniture and Basta Sole shade products are also available at our website.

If you have difficulty understanding any of the instructions and need assistance while installing the TV Mounting Bracket, please call Tropitone’s Customer Service Center at 949-951-2010.

Tropitone Furniture Co., Inc.
5 Marconi, Irvine, CA 92618

949 951 2010 phone
www.tropitone.com

Part # R9T12TVMNT
Revised: 12-13-12
©2012 Tropitone Furniture Co., Inc.



CABANA / PAVILION TV MOUNT BRACKET INSTALLATION ALUMINUM FRAME MODELS

Thank you for selecting Tropitone® Basta Sole® Cabana / Pavilion Accessories for your shade needs.

WARNING: Do not try to lift or flip Cabanas / Pavilions with only one person. Components may be heavy and awkward to handle, and may result in injury to persons or damage to property if not lifted properly. Safety Glasses must be worn when drilling holes in frame components.

CAUTION: When instructed to fully tighten screws, do not over tighten and strip the threads.

- ✓ Read through all steps before starting assembly.
- ✓ Completely unpack all boxes and thoroughly check for items that may be individually wrapped.

WARNING: Please consult a Qualified Electrician when installing electrical components.

Tools needed:

- | | |
|-------------------------------|--------------------------|
| (2) 1/2" Combination Wrenches | 17/64" Drill Bit |
| 7/16" Combination Wrench | Safety Glasses |
| 3/16" Hex Key | Measuring Tape |
| 3/8" Power Drill | Marking Pencil or Marker |
| 21/64" Drill Bit | Clamp |

Parts List:



- | | |
|-------------------------------------|---------------------------------------|
| (1) TV Mounting Bracket | (1) 1/4-20 x 1-3/4" Socket Head Screw |
| (1) 5/16-18 x 3-1/4" Hex Head Screw | (1) 1/4" Flat Washer |
| (1) 5/16" Flat Washer | (1) 1/4" Lock Washer |
| (1) 5/16" Lock Washer | (1) 1/4-20 Hex Nut |
| (1) 5/16-18 Hex Nut | |

Not Included:

- | | |
|----|----------------------|
| TV | Swivel/Tilt TV Mount |
|----|----------------------|

Step 1


Once your Cabana has been completely assembled, choose a corner to mount your TV Mounting Bracket.

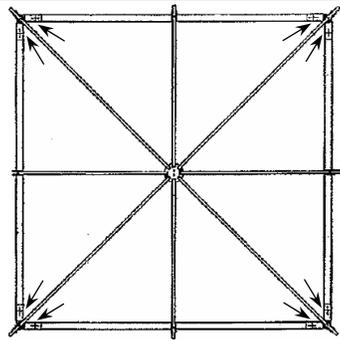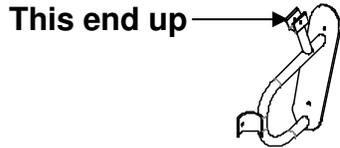

Step 2

Locate the Upper Frame Arm located in the corner of the Cabana where the TV Mounting Bracket will be located.

Using a measuring tape, measure up from the bottom of the arm **12-1/4"**, mark the location of the bracket assembly hole using a Marking Pencil or Marker.

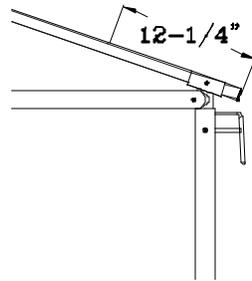


Step 3

Align the TV Mounting Bracket to the Cabana Frame, with the hole in the Upper Arm Bracket aligned over the hole location mark on the Upper Frame Arm. Be sure that the Corner Pole Bracket is resting on the Corner Pole.

Being careful not to damage the Top Cover, clamp the Upper Arm Bracket portion of the TV Mounting Bracket to the Upper Frame Arm.

Using a Power Drill equipped with a 17/64" Drill Bit, drill through the Upper Frame Arm using the hole in the Upper Arm Bracket as a guide.

Drill hole here in Step 3

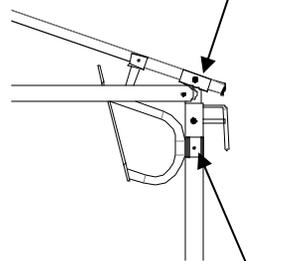

Drill hole here in Step 4

Step 3 (Continued)

Install (1) 1/4-20 x 1-3/4" Socket Head Screw with (1) 1/4" Flat Washer into the Upper Arm Bracket portion of the TV Mounting Bracket. Secure with (1) 1/4" Locking Washer and (1) 1/4-20 Hex Nut.

Do NOT fully tighten the Socket Head Screw and Hex Nut until Step 4.

Step 4

Align the Corner Pole Bracket portion of the TV Mounting Bracket to the Corner Pole.

Using a Power Drill equipped with a 21/64" Drill Bit, drill through the Corner Pole Bracket portion of the TV Mounting Bracket using the hole in the Corner Pole Bracket as a guide.

Install (1) 5/16-18 x 3-1/4" Hex Head Screw with (1) 5/16" Flat washer into the Corner Pole Bracket portion of the TV Mounting Bracket. Secure with (1) 5/16" Locking Washer and (1) 5/16-18 Hex Nut. Fully tighten both TV Mounting Bracket Screws.

Step 5

Double-check that all Screws and Locking Nuts are fully tightened, but do not over tighten and strip the threads.

Periodic Maintenance

Periodic maintenance is needed to insure safety and proper operation over the life of the Cabana / Pavilion.

- ✓ Double-check that all the fasteners are fully tightened, but do not over tighten and strip the threads.
- ✓ Repair any corrosion promptly to minimize damage to finish. (see Care and Maintenance guide)