

TROPITONE®



CANTILEVER UMBRELLA SURFACE MOUNT

TROPITONE®

CANTILEVER UMBRELLA SURFACE MOUNT



ASSEMBLY INSTRUCTIONS

Congratulations on the purchase of your Tropitone® Basta Sole shade products. Please read all instructions carefully before assembling and using this product. Keep this guide for future reference.

CAUTION!

Do not try to lift or flip shade products with only one person. Pieces may be heavy and awkward to handle, and may result in injury to persons or damage to property if not lifted properly.

The actual ground surface/material the Surface Mount and concrete will be installed in can vary substantially. Please consult a contractor or other qualified professional who can best advise you on how to secure the Surface Mount to your ground surface.

- ✓ Check that all hardware and components are provided before you start assembly.

REQUIRED TOOLS

Hammer Power Drill
Carbide Tipped Masonry Drill
Bit

Safety Glasses

COMPONENTS

(1) Anchor Tube



(1) Surface Mount
Locking Tube



HARDWARE

(4) Hex Head Screw
(4) 1 ¼" Washer
(4) ¾" Lock Washer




Hardware Required (not included) for
mounting to Cement Pad - Consult a
Contractor or other qualified Professional

(4) Concrete Lag Bolts
(4) Washers
(4) Lock Nut



INSTALLING CEMENT FOOTING

1. Install the Anchor Tube in to the concrete footing (footing must weigh more than 500 lbs.) Orient the Anchor Tube so that the end of the tube with the rods is placed into the cement first.

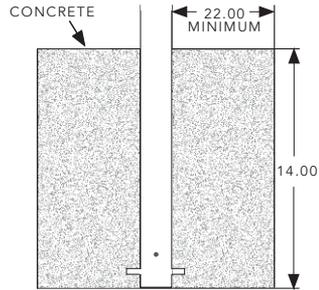

INSTALLING CANTILEVER UMBRELLA ONTO THE SURFACE MOUNT

1. Lay umbrella on a prepared surfaced. Place the square plate at the lower end of the Lower Pole on to the assembly of the square plate of the Surface Mount.
2. Align holes of the square plate with the threaded holes on the Base Stand.
3. Using the Hex Head Wrench, install (4) Hex Head Screws, (4) $\frac{3}{4}$ " Lock Washers and (4) $1 \frac{1}{4}$ " Washers. Fully tighten.
4. Using (2) persons, lift the Upper Pole and Lower Pole of the Cantilever Umbrella assembly to the vertical position.
5. Insert the Surface Mount Locking Tube into the Anchor Tube. After insertion, turn the Surface Mount Locking Tube counter clockwise until it drops slightly. Rotate counter clockwise again until the umbrella drops 1" more and engages into place.



NOTE: Local regulations may require the Cantilever Umbrella to be lag bolted to the concrete or deck surface. Please consult a local contractor or other qualified professional for additional information and hardware requirements.

REMOVING THE UMBRELLA

1. Using (2) persons, lift the umbrella until it stops, about 1", turn clockwise and lift the umbrella out of the surface mount.

TROPITONE®

CARE INSTRUCTIONS

Refer to the Tropitone® Care, Maintenance, Safety & Warranty Information guide included with your furniture and available at tropitone.com-click on Product Care.

Additional care information, "How To" videos and assembly instructions for Tropitone Outdoor Furniture and Basta Sole shade products are also available at our website including the "Cantilever Umbrella Assembly Instructions".

CUSTOMER SERVICE

If you have difficulty understanding any of the instructions and need assistance while fastening your components together, please call Tropitone's Customer Service Center at 949.951.2010.

Tropitone Furniture Co., Inc.
5 Marconi
Irvine, California 92618
949 951 2010
www.tropitone.com

Warranty

For our current Warranty and product care information, please visit www.tropitone.com/warranty
Part # R9T00053
©2019 Tropitone Furniture Co., Inc.
09/19